

PN32-412 CLUTCH LEVER INSTRUCTIONS

1. REMOVE STOCK LEVER AND PLUNGER
2. APPLY A LIGHT COAT OF GREASE TO ARC LEVER PIVOT SLEEVE AND ENDS OF PLUNGER
3. INSERT ARC PLUNGER INTO CLUTCH MASTER CYLINDER IN DIRECTION SHOWN



4. INSTALL ARC LEVER WITH PIVOT BOLT AND SLEEVE PROVIDED
NOTE-DO NOT USE STOCK SPRING
5. ADJUST SWITCHES ON BARS TO ALLOW MAXIMUM ROOM FOR LEVER TRAVEL
6. TRIM THE GRIP'S FLANGE TO ALLOW MAXIMUM ROOM FOR LEVER TRAVEL



CLUTCH MOVED AWAY FROM GRIP,
SWITCHES MOVED TOWARD GRIP

7. ADJUST LEVER POSITION SO CLUTCH IS COMPLETELY DISENGAGED WHILE THE LEVER SITS JUST OFF OF THE OUTER FINGERS



CLUTCH FULLY DISENGAGED
WITH LEVER OFF OF
OUTER FINGERS